
# SAFETY-VIEW K. D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

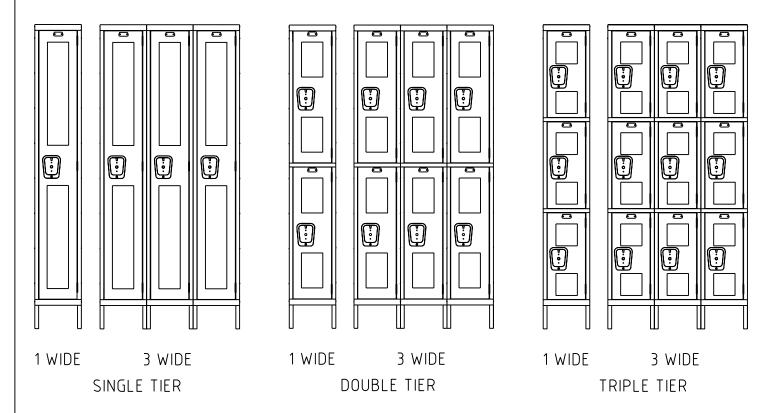

### **General Instructions**

- 1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
- 2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
- Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
- 4. Be careful to use the correct hardware as specified in the assembly instructions.
- 5. Items with suffix (xx) are available options.

## **CAUTION**

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.

FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.

INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE



401 Jim Moran Blvd., P.O. Box 9601 Deerfield Beach, FL 33442

Phone (954) 429-9155 Fax (954) 428-3843

www.ListIndustries.com

# SAFETY-VIEW K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

PACKAGE CONTENTS									
REF. NO.	DESCRIPTION	PART NO.		DE QUAN 2-TIER			DE QUAN 2-TIER		
①	REAR PANEL	KR1272	1	1	1	3	3	3	
2	RIGHT/LEFT SIDE PANEL	KPdd72	2	2	2	4	4	4	
3	TOP/BOTTOM SHELF	KS12dd	2	3	4	6	9	12	
4	HAT SHELF	KH12dd	1	-	-	3	_	-	
(5)	SINGLE CEILING HOOK	н5К	2	4	-	6	12	-	
6	DOUBLE CEILING HOOK	н7К	1	2	3	3	6	9	
××①	COAT ROD BRACKET	××TRH 200	××2	××4	-	××6	12	-	
××8	COAT ROD	××KCR	××1	××2	-	××3	6	-	
9	DOOR FRAME ASSEMBLY	KDF1278-†SV	1	1	1	3	3	3	
×10	DOOR	KD1272-†SV	1	2	3	3	6	9	
×11)	DRAWN HANDLE S.S.	TBECK2	1	2	3	3	6	9	
×12	LOCK CHANNEL	KLhh-t	1	2	3	3	6	9	
×13	CHANNEL STOP	CS002	2	4	6	6	12	18	
×14	NYLON LATCH	DLB100B	2	4	6	6	12	18	
×15	SPRING	LS100	2	4	6	6	12	18	
×16	LOCK BRACKET	SLB101L	1	2	3	3	6	9	
×17	PLASTIC LIFTER	LC100B	1	2	3	3	6	9	
18	REAR LEG	KLG	2	2	2	2	2	2	Single Tier
×19	BUMPER	KDB300	3	4	6	9	12	18	KD Locker
20	NUMBER PLATE	NPL	1	2	3	3	6	9	
21)	NUMBER PLATE RIVET	RV101	2	4	6	6	12	18	
22	3/8" SLOTLESS BOLT	MBT200	62	74	70	134	166	188	
23	HEX NUT	N201	60	70	64	128	154	170	PART NO. LEGEND:
24	ESCUTCHEON PLATE	RPE100	1	2	3	3	6	9	dd = DEPTH
25)	HI-DOME CAP NUT	N110	2	4	6	6	12	18	hh = HEIGHT (FRAME)
×26	RIVET (HANDLE)	RV102	1	2	3	3	6	9	t = TIER
×27	SAFETY VIEW LEXAN	SVL72-t	2	4	6	6	12	18	
×28	LEXAN RETAINER	SVLR	2	4	6	6	12	18	PART NUMBER SUFFIX SHOWS WIDTH, DEPTH, HEIGHT AND TIER. CUSTOMER TO SPECIFY.
×29	RETAINER RIVET	RV100	4	8	12	12	24	36	
×30	RIVET (HINGE)	RV102	6	8	12	18	24	36	

NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS,

SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-L-KIST-A

FOR OPTIONAL 6" HIGH CLOSED METAL BASE,

SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-L-KIST-B

- $\star$  SHIPS PRE-HUNG IN FRAME ASSEMBLY.
- \*\* STRIKE PLATES ARE OPTIONAL INCLUDES TWO RIVETS (9).

TE: Tools

TOOLS REQUIRED: 3/8" NUT DRIVER (3/8" SOCKET MAY BE SUBSTITUTED)

REMOVE PROTECTIVE FILM FROM SAFETY-VIEW PANELS AFTER INSTALLATION

#### TWO-YEAR WARRANTY

LIST INDUSTRIES K.D. LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS.



## SAFETY-VIEW K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS 2 4 2 20 9 5 10 6 xx7 8xx 3 18 SIDE PANELS MUST GO INSIDE REAR PANEL AND INSIDE FRAME. TOP VIEW FRONT FOR 9" AND 12" WIDE SHELVES 30 1 WIDE UNIT PLAN VIEW ONLY USE PROVIDED MIDDLE HOLES FOR FASTENING.

COAT ROD (KCRww) & COAT ROD BRACKETS (TRH 200) ARE OPTIONAL.

RIVET AT HINGE

LIST INDUSTRIES MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE; HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR PARTS, REPLACEMENTS MAY BE OBTAINED FROM LIST INDUSTRIES. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

#### PLEASE PROVIDE THE FOLLOW INFORMATION:

(ALL ITEMS (3) KS SHELF)

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART NUMBER(S) AS SHOWN IN PARTS LIST COLOR PURCHASE DATE

COMPANY NAME & CONTACT PERSON

WHERE THE PRODUCT WAS PURCHASED FROM


IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION.





FOLLOW BASIC INSTRUCTIONS FROM 3-WIDE ASSEMBLY

#### SAFETY-VIEW K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

(A GROUPING OF 3-WIDE SINGLE TIER LOCKERS ILLUSTRATED)

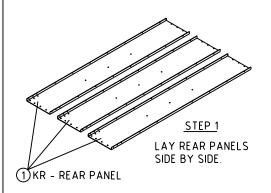

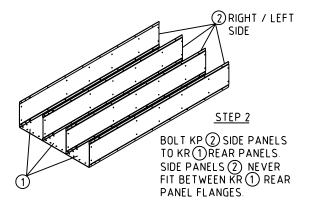

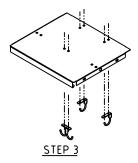

INSTALL DOUBLE CEILING HOOK (H7K) (6) AND SINGLE CEILING HOOKS (H5K) (5) TO (KH) (4) HAT SHELF.

> LOCK (12) CHANNEL

LS100


NYLON LATCH DLB100B

(14)

(14 A)

LATCH SPRING

ASSEMBLY DLS100

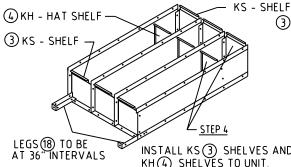

INSTALL KS ③ SHELVES AND
KH ④ SHELVES TO UNIT.
INSTALL TWO KLG ⑧ REAR
LEGS TO INSIDE OF SIDE ② AND REAR
PANEL ① BY SLIDING INTO PLACE FROM BOTTOM.


DEAD

STEP 5


BOLT DOOR AND FRAME (9) ASSEMBLIES TO KS (3) SHELVES AND KP (2) SIDE PANELS. STAND UNIT UP AND ALIGN LOCKER TOPS EVENLY. TIGHTEN ALL BOLTS AND NUTS.

NOTE: WHEN BOLTING ONE UNIT TO ANOTHER, OMIT ONE SET OF BOLTS IN END FRAME AND SIDE TO MINIMIZE GROWTH FROM BOLT HEADS.


ASSEMBLY OF SINGLE ROW LOCKERS NEVER PUT SIDE PANELS BETWEEN FRAMES OR REAR PANELS.



SIDE PANELS MUST GO INSIDE REAR PANEL AND INSIDE FRAME.

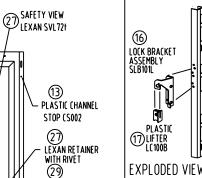


EXPLODED VIEW OF LOCK CHANNEL



BRACKETS TO BE BOLTED TO UNDERSIDE OF HAT SHELF WITH COAT ROD IN BETWEEN.

- ××① COAT ROD BRACKETS (××TRH 200)
- ××(8) COAT ROD (×× KCRww)

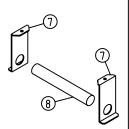



(16)

LOCK BRACKET

(11)(24)

RECESSED HANDLE WITH


**ESCUTCHEON PLATE** 

SLOTLESS
BOLT

22)

RECESSED HANDLE

ASSEMBLY OF ESCUTCHEON PLATE



6 DOUBLE CEILING HOOK (H7K)

TO BE BOLTED TO UNDERSIDE OF HAT SHELF.

SINGLE CEILING HOOK (H5K)

TO BE BOLTED TO UNDERSIDE OF HAT SHELF

