CUBIX™ MODULAR LOCKER ASSEMBLY INSTRUCTIONS

General Instructions

1. Check material received against the packing list. Check the number of packages received and then check the contents of each package.

2. Check the material received for damage. If damage has occurred, secure a "damage notation" from the carrier

3. Identify each part as it is unpacked and put like parts together as close as possible to the working area where they are to be assembled.

4. Be careful to use the correct hardware as specified in the assembly instructions.

CAUTION

In the interest of safety, all lockers must be securely anchored to the floor and/or wall. For safety, handle all components carefully and wear work gloves when assembling lockers. Install all units plumb and tighten all hardware securely. Retain instructions for future reference.

LiST inDUSTRieS inC.®

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	HCFS1212/18	TOP/BOTTOM	2
2	HCSP1212/18	SIDE PANEL	2
3	HCLF12-1FP	LATCH FRAME	1
4	KBLP100	DOOR PULL	1
5	LKD1272-6DP/PL/SVP	DOOR	1
6	HCHF12-1	HINGE FRAME	1
7	HCBP1212	BACK PANEL	1
8	KBLH101P	LATCH	1
9	NPH100	NUMBER PLATE	1
10	MBT200	BOLT	20
11	N201	NUT	18
12	N110	DOME NUT	2
13	RV101P	PLASTIC RIVET	2
14	TCS100	SCREW	3
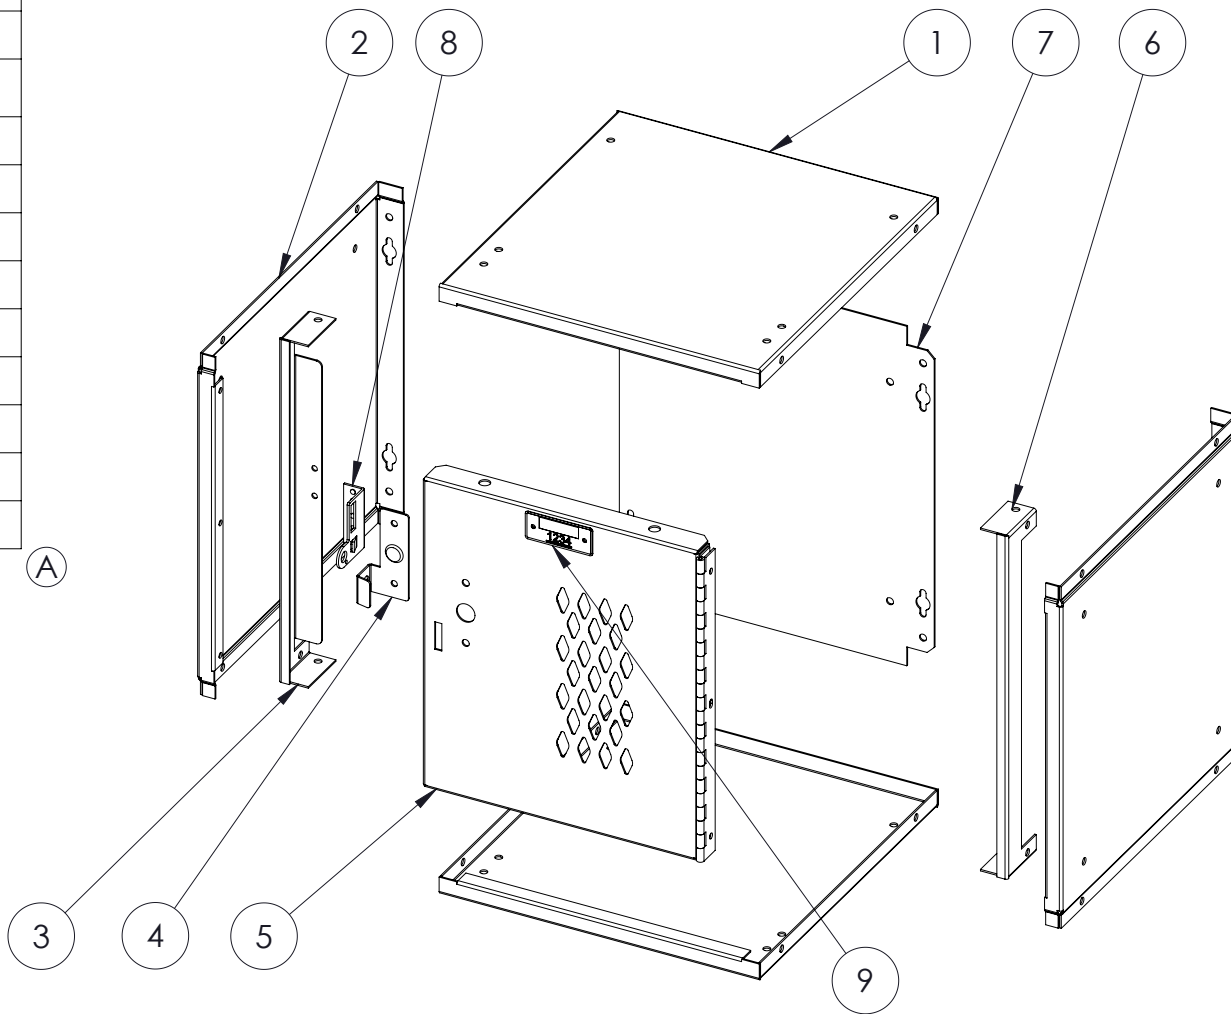
TOLERANCES UNLESS OTHERWISE SPECIFIED

INCHES
XX. ± .010
XXX. ± .005

FRACTIONAL
X/X. ± 1/64

ANGULAR
∠ ± 1/2°

UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN INCHES. METRIC DIMENSIONS WILL BE WITHIN [XX]

DRAWN BY	DATE	DESCRIPTION	
JIL	1/16/2013		**CUBIX LOCKER**
CHECKED BY"	DATE		**HC12(12/18)12**
APPROVED BY	DATE		
RAM	3/24/17		

SCALE	SHEET	PART NO.	DRAWING NO.	REV.
:	1 OF 1		**SA1566**	A

STEP 1

Note: Bolts and nuts should only be finger tight thoughout the assebly process.

7

2
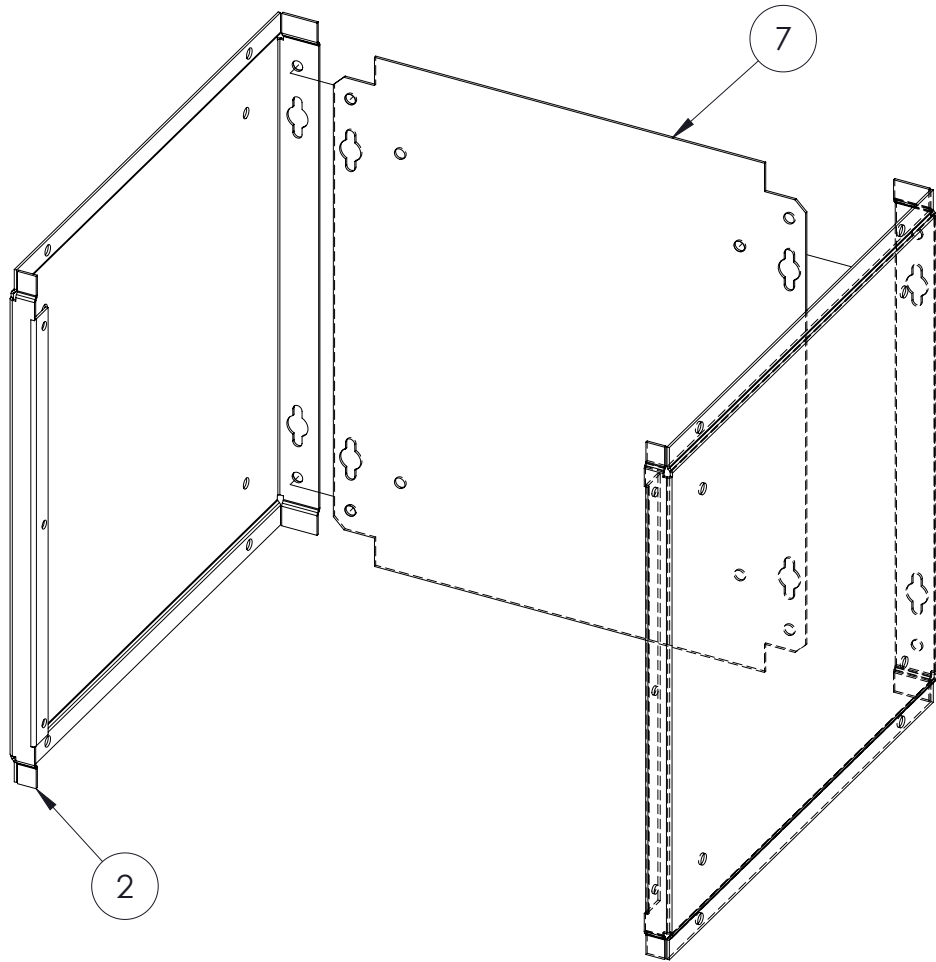
-Bolt side panels (HCSP1212) and back (HCBP1212) together. Back is bolted to the insde of the unit.
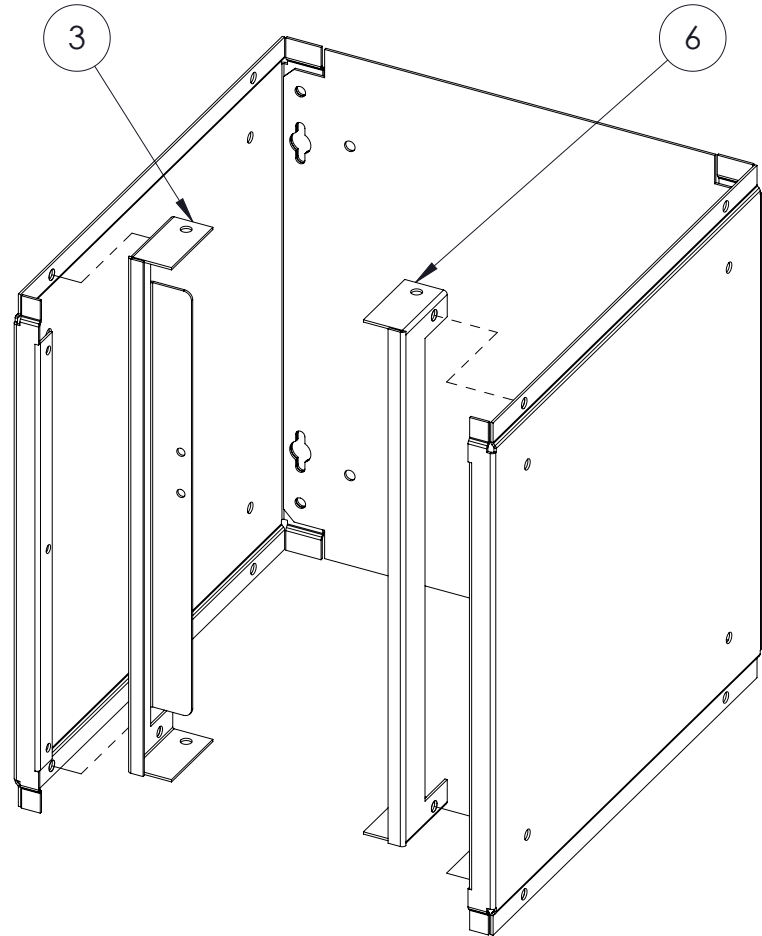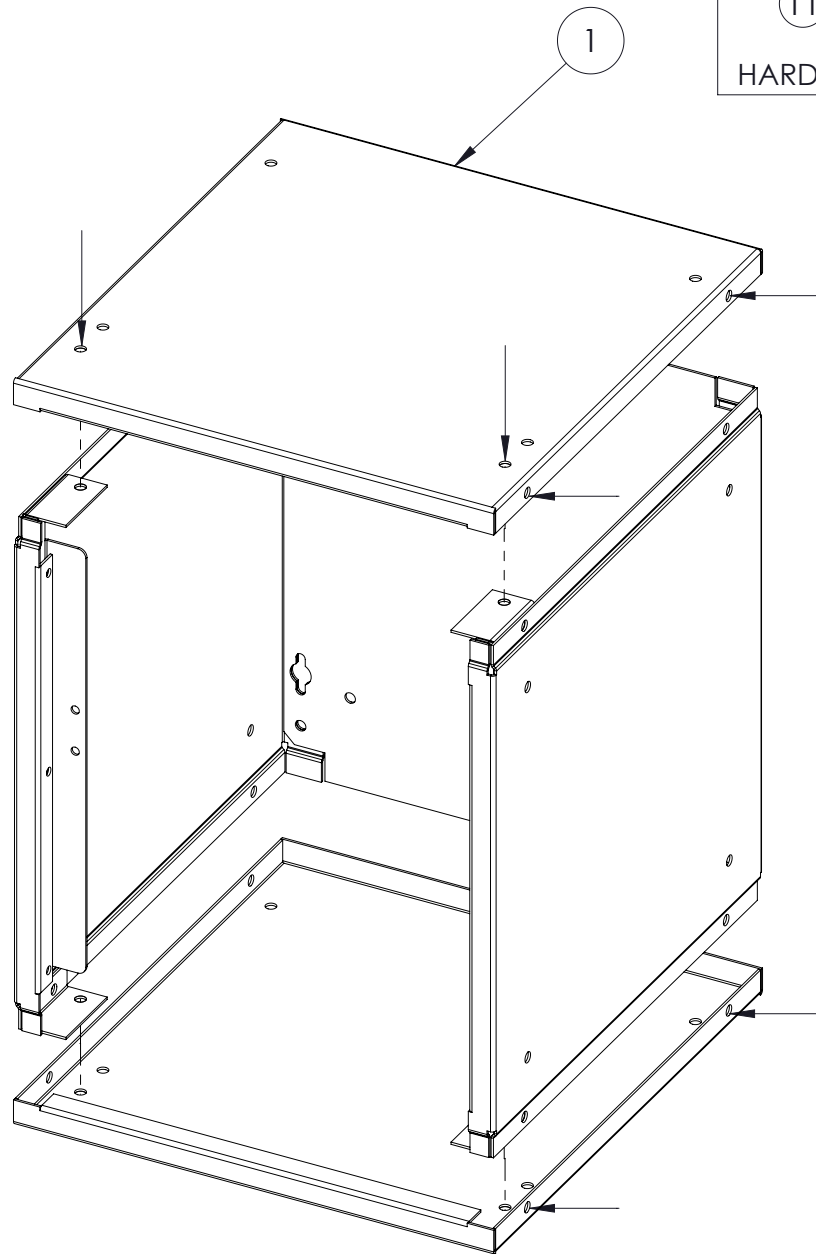
STEP 2

3

6

-Insert left (HCLF12-1FP) frame and rigth (HCHF12-1) frame into the inside flanges of the side panel. Do not bolt yet!

RAM   3/24/17
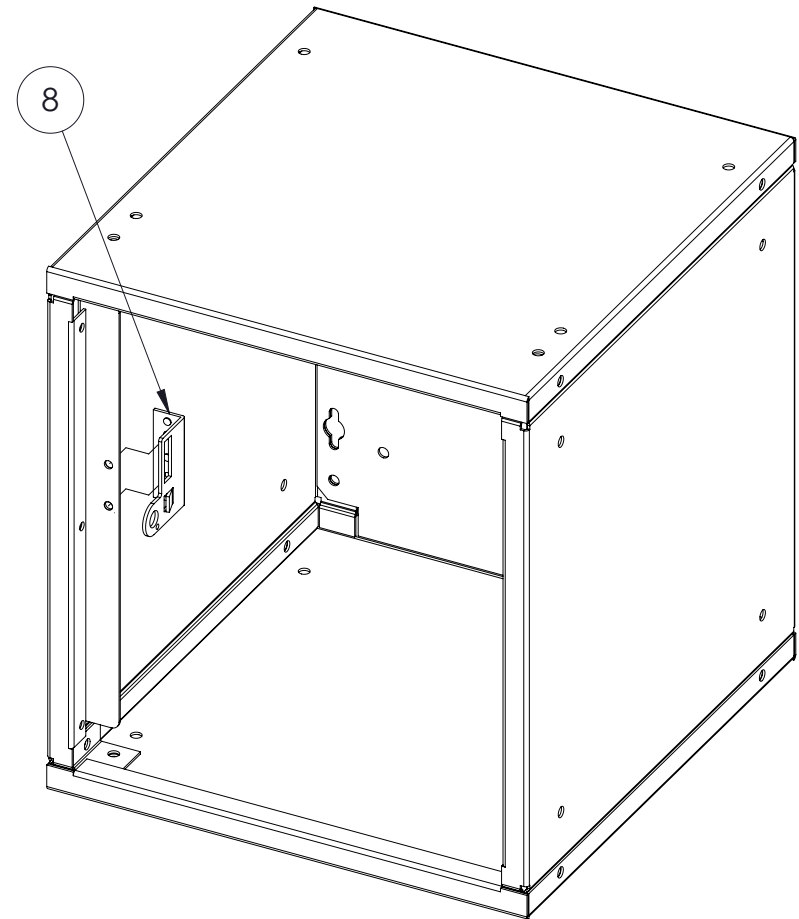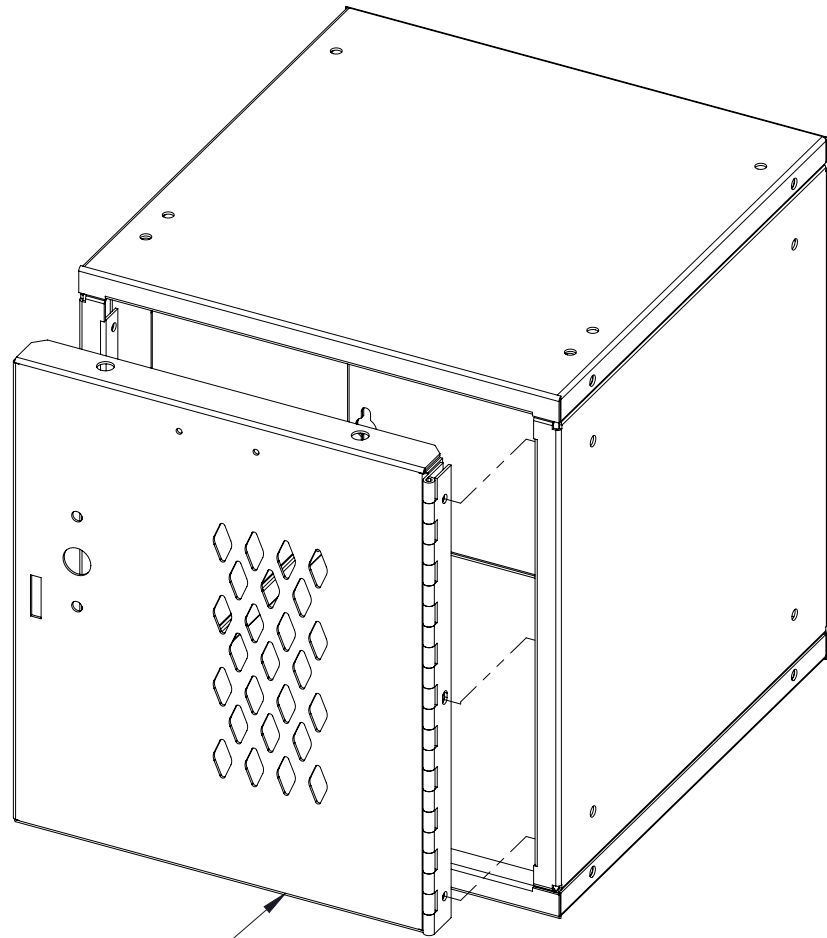
A

3-24-17

SA1566-2

STEP 3

STEP 4

-Place top/bottom (HCFS1212) and bolt the side panels and frames to it.

-Bolt the latch (KBLH101) to the latch frame.
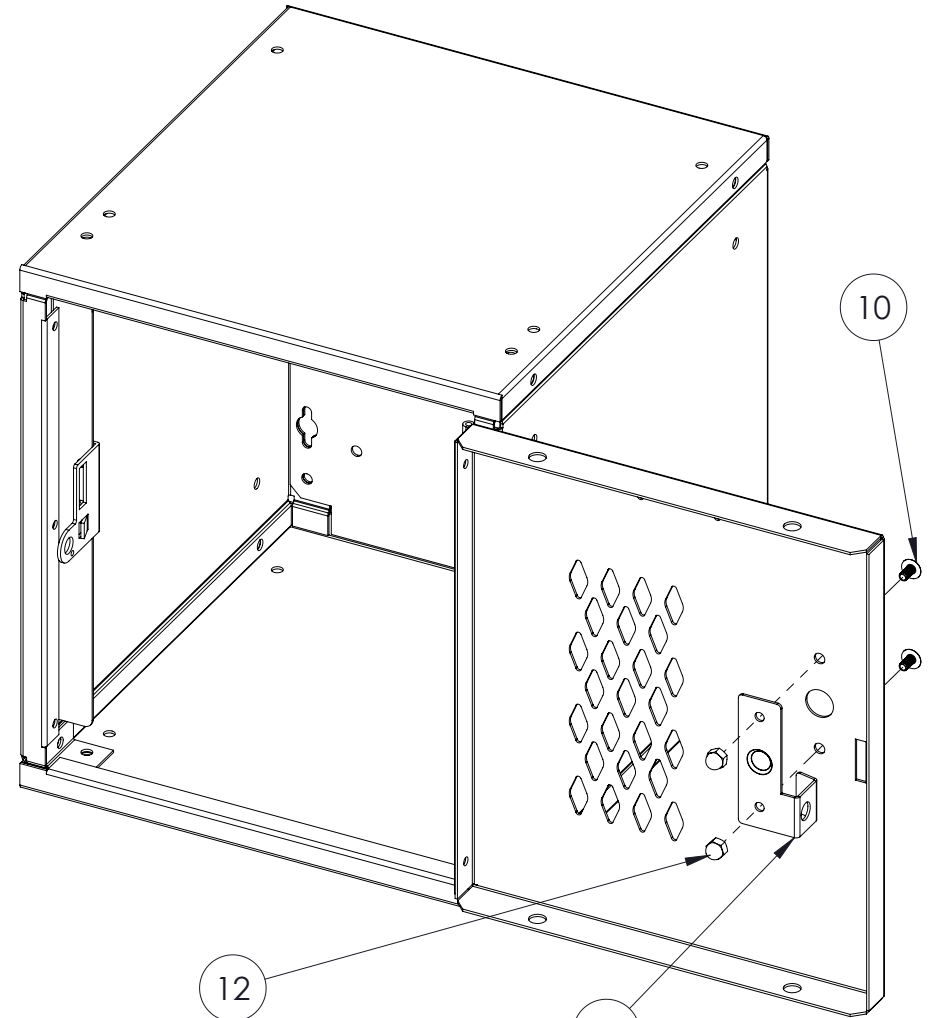
3-24-17

SA1566-3
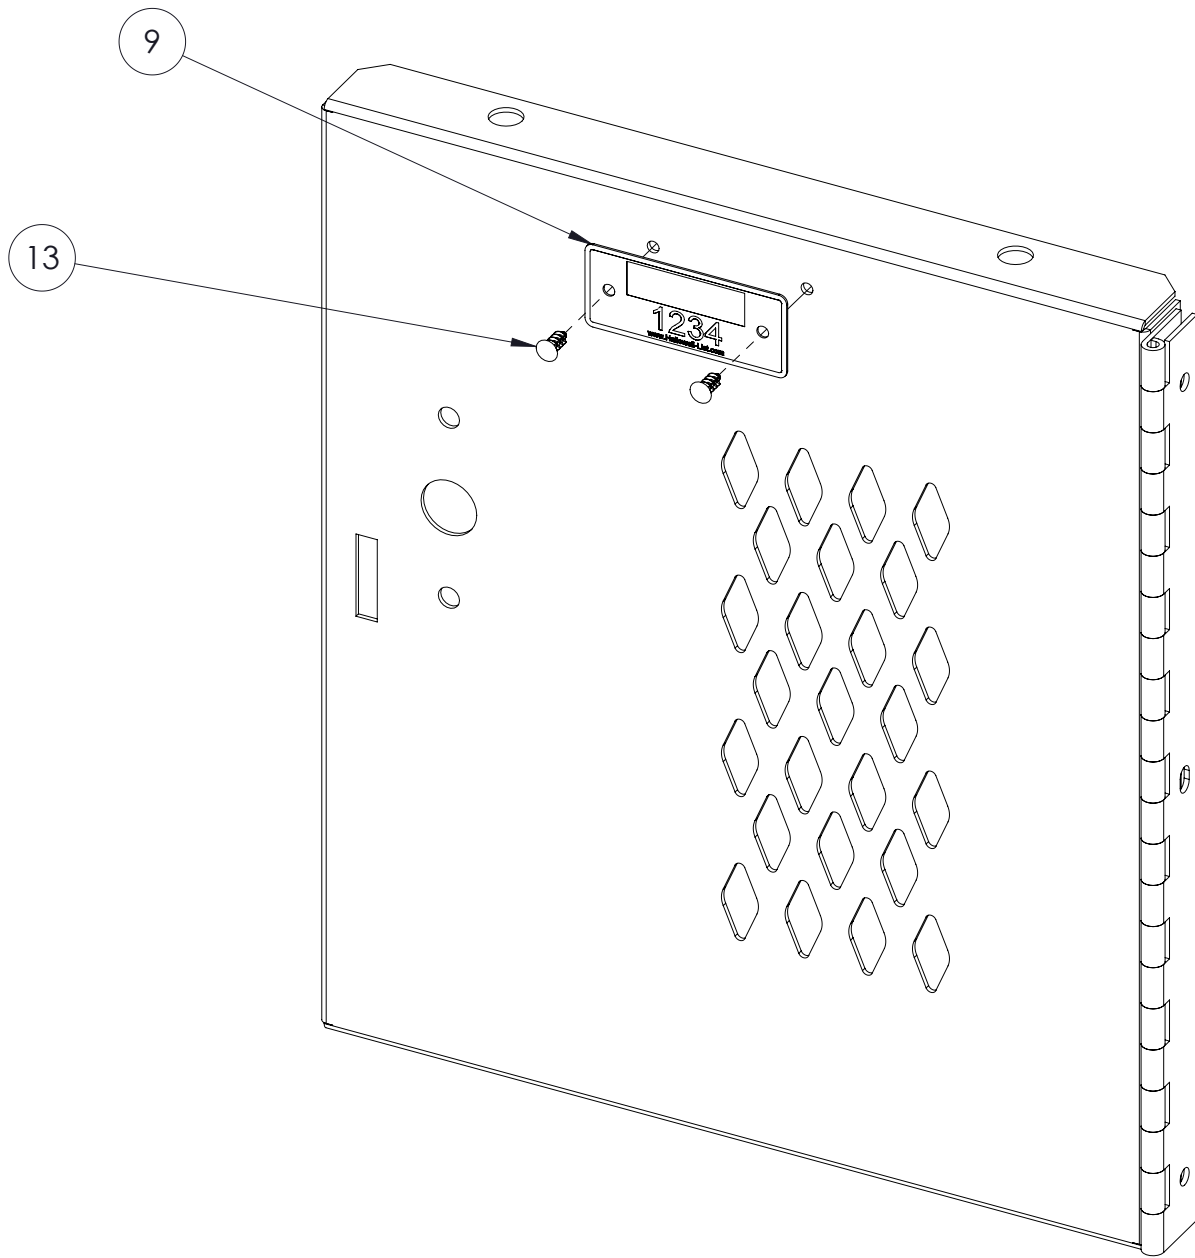
STEP 5

5

14

HARWARE NEEDED

STEP 6

10

12

4

-Attach finger pull to door using (N110) nuts and (MBT200) bolts.

12

10

HARWARE

3-24-17

SA1566-5